


Mounting the strike on the door


Screw type
depends on
doors material

Always use
suplied washers

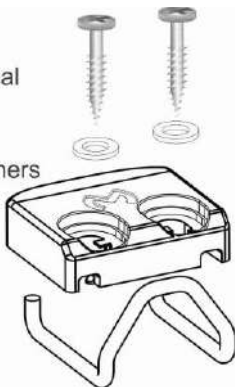

Due to the use of different door thickness and materials, the manufacturer has decided to leave the choice of screws to the installer. While installing, we recommend the showed assembly procedure of the strike.

PRESS until CLICK

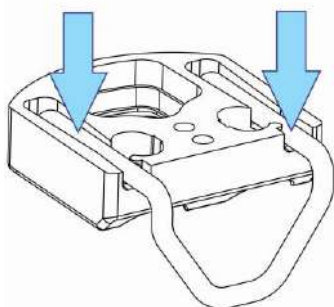


STEP 1

Attach metal strike wire to the plastic strike body and press until it jams into holder.

STEP 2

Insert the screws with washers into the holder. There they will be held by a plastic wedge.

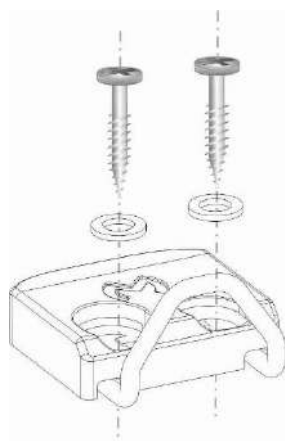

Use screws **between** $\varnothing = 3$ and $\varnothing = 5$ mm,
We recommend one of these head types:



For complete
Installation Information
follow the link.